




 
 

 
 




 
 

 
 
 

 
 





 



 
 
 


U151E AUTOMATIC TRANSMISSION

SST

 


 
 


 




| | | | |
|---|---------------|---|---|
|  | 09215-00013 | Crankshaft Bearing Remover & Replacer Set B | - |
|  | (09215-00471) | Camshaft Bearing Remover & Replacer | - |
|  | 09223-15020 | Oil Seal & Bearing Replacer | - |
|  | 09223-15030 | Oil Seal & Bearing Replacer | - |
|  | 09308-00010 | Oil Seal Puller | - |
|  | 09316-12010 | Transfer Bearing Replacer | - |
|  | 09316-60011 | Transmission & Transfer Bearing Replacer | - |
|  | (09316-00011) | Replacer Pipe | - |
|  | 09350-32014 | TOYOTA Automatic Transmission Tool Set | - |
|  | (09351-32010) | One-way Clutch Test Tool | - |
|  | (09351-32020) | Stator Stopper | - |




 

 





 
PP



| | | | |
|---|---------------|---------------------------------|---|
|  | (09351-32070) | No.2 Piston Spring Compressor | - |
|  | (09351-32140) | Oil Seal Replacer | - |
|  | 09387-00020 | Direct Clutch Wrench | - |
|  | 09387-00030 | Counter Drive Gear Holding Tool | - |
|  | 09387-00041 | Bearing Puller Assembly | - |
|  | (09387-01010) | Claw No.1 | - |
|  | (09387-01021) | Claw No.2 | - |
|  | (09387-01030) | Pin | - |
|  | (09387-01040) | Bearing Puller Body | - |
|  | 09387-00050 | Under Drive Gear Puller | - |
|  | 09387-00060 | Second Brake Wrench | - |
|  | 09387-00070 | First & Reverse Brake Wrench | - |

| | | | |
|---|---------------|---|---|
|  | 09387-00080 | Counter Drive Gear Nut Wrench | - |
|  | 09502-12010 | Differential Bearing Replacer | - |
|  | 09506-35010 | Differential Drive Pinion Rear Bearing Replacer | - |
|  | 09514-35011 | Rear Wheel Bearing Puller | - |
|  | 09527-17011 | Rear Axle Shaft Bearing Remover | - |
|  | 09550-60010 | Differential Side Bearing Replacer | - |
|  | (09951-00490) | Replacer 49 | - |
|  | 09564-32011 | Differential Preload Adaptor | - |
|  | 09608-10010 | Steering Knuckle Oil Seal Replacer | - |
|  | 09649-17010 | Steering Knuckle Tool | - |
|  | 09710-30050 | Suspension Arm Bushing Replacer | - |
|  | 09726-40010 | Lower Control Shaft Bearing Replacer | - |

 
 
 
 
 
 
 


 
 
PP

| | | | |
|---|---------------|----------------------------|---|
|  | 09930-00010 | Drive Shaft Nut Chisel | - |
|  | (09931-00010) | Handle | - |
|  | (09931-00020) | Nut Chisel | - |
|  | 09950-00020 | Bearing Remover | - |
|  | 09950-00030 | Bearing Remover Attachment | - |
|  | 09950-40011 | Puller B Set | - |
|  | (09957-04010) | Attachment | - |
|  | 09950-60010 | Replacer Set | - |
|  | (09951-00230) | Replacer 23 | - |
|  | (09951-00260) | Replacer 26 | - |
|  | (09951-00320) | Replacer 32 | - |
|  | (09951-00450) | Replacer 45 | - |

| | | | |
|---|---------------|-------------------|---|
|  | (09951-00490) | Replacer 49 | - |
|  | (09951-00500) | Replacer 50 | - |
|  | (09951-00590) | Replacer 59 | - |
|  | (09952-06010) | Adapter | - |
|  | (09957-04010) | Attachment | - |
|  | 09950-60020 | Replacer Set No.2 | - |
|  | (09951-00750) | Replacer 75 | - |
|  | (09951-00810) | Replacer 81 | - |
|  | (09951-00890) | Replacer 89 | - |
|  | (09951-00910) | Replacer 91 | - |
|  | (09951-01030) | Replacer 103 | - |
|  | 09950-70010 | Handle Set | - |

| | | | |
|---|---------------|------------|---|
|  | (09951-07100) | Handle 100 | - |
|  | (09951-07150) | Handle 150 | - |

RECOMMENDED TOOLS

| | | | |
|---|---------------|--------------------------|---|
|  | 09011-12301 | Socket Wrench 30 mm | - |
|  | 09031-00030 | Pin Punch | - |
|  | 09031-00040 | Pin Punch . | - |
|  | 09040-00011 | Hexagon Wrench Set | - |
|  | (09043-20050) | Socket Hexagon Wrench 5 | - |
|  | (09043-20060) | Socket Hexagon Wrench 6 | - |
|  | (09043-20100) | Socket Hexagon Wrench 10 | - |
|  | 09070-20010 | Moulding Remover | - |
|  | 09090-04020 | Engine Sling Device | - |
|  | 09905-00012 | Snap Ring No.1 Expander | - |
|  | 09905-00013 | Snap Ring Pliers | - |

EQUIPMENT

| | |
|-----------------------------------|--|
| Straight edge | |
| Torque wrench | |
| Vernier calipers | |
| Dial indicator with magnetic base | |
| Slide calipers | |
| Chain block | |
| Feeler gauge | |
| Plastic hammer | |
| Press | |

LUBRICANT

Automatic transaxle fluid

| | | |
|------------------|-------------------------------------|-----------------------|
| Dry fill | 8.1 liter (8.6 US qts, 7.1 Imp.qts) | Toyota Genuine ATF WS |
| Drain and refill | 3.6 liter (3.8 US qts, 3.2 Imp.qts) | |

SSM

| | |
|---|---|
| Toyota Genuine Seal Packing 1281 Three Bond 1281 or Equivalent | - |
| Toyota Genuine Adhesive 1344 Three Bond 1344 or Equivalent | - |